



# 5-phase Stepping Motor Driver ADB-5F40 ADB-5F40A

# Instructions Manual (For designers' use)

Please ensure to read and understand this Instructions Manual before using the product. Please keep this Instructions Manual at hand so that it is always available for reference.

**CE** MN0090-2

#### Instructions Manual

#### Introduction

This Instructions Manual describes the safe and proper method of handing "5-phase Stepping Motor Driver ADB-5F40" with emphasis on the specifications, assuming that our readers are engaged in designing of control devices incorporating stepping motors. Please ensure to read and understand this Instructions Manual before using the product.

Please keep this Instructions Manual at hand

so that it is always available for reference.

#### Instructions Manual

#### Descriptions in this manual on safety matters:

This product must be operated and used properly.

Otherwise , or when it is operated and used erroneously, unforeseen accidents may occur, causing physical injuries or property damages.

Majority of these accidents can be avoided if you are well informed of hazardous circumstances in advance.

Consequently, this instructions manual describes all the hazardous and dangerous circumstances and situations which can be foreseen and anticipated as well as necessary precautions.

All the above descriptions are being titled by the following symbol-marks and signal-words, namely:



Represents warnings ignorance of which can cause accidents involving fatal or serious physical injuries.



Represents cautions ignorance of which can cause accidents involving minor physical injuries or property damages.

#### Introduction

## Descriptions in this manual on safety matters:

#### CONTENTS

PAGE

1-1.	Safety Precautions			 6
1-2.	Safety Information	for	Handling	 7

## 2. Overview

1. Safety

2-1.	Characteristics	10
2–2.	Product Configuration	10
2–3.	Appearance	10

## 3. Name and Function of Each Section

3-1.	Signal I/O Connector (J1)	11
3–2.	DC Input/Motor Output Connector (J2, J3)	12
3–3.	POWER LED	12
3–4.	0. H. A LED	12
3–5.	Operating Section	13

## 4. Setting

4–1.	Setting MOTOR SELECT switch	14
4–2.	Setting STEP ANGLE SELECT switch	14
4–3.	Setting HOLD CURRENT ADJUSTMENT trimmer	15
4–4.	Setting DRIVE CURRENT SELECT switch	16
4–5.	Setting PULSE INPUT TYPE SELECT switch	17
4–6.	Setting HOLD SWITCHING TIME SELECT switch	18
4–7.	Setting ROTATE CHARACTERISTIC SELECT switch	18

## 5. Installation

5–1.	Conditions for Installation	 19
5–2.	Mounting Method	 20

## 6. Connection

6-1.	Overview of Connection Configuration	21
6-2.	Connecting Signal I/O Connector (J1)	22
6–3.	Connecting DC Input/Motor Output Connector (J2, J3)	23
6-4.	Inputting Power	24

## 7. Confirmation of Setting and Connection

7-1.	Check Points		25
------	--------------	--	----

8. Maintenance and Check-up	PAGE
8-1. Maintenance and Check-up 8-2. Troubleshooting	26 27
9. Storing and Disposal	
9-1. Storing 9-2. Disposal	
1 O. Specifications	
10-1. General Specifications 10-2. I/O Signal (1) Example Circuit Connection	
(2) Drive pulse input (CW, CCW)	
(3) Motor excitation stop input (M.F)	
(4) Phase signal output (P.0)	
10-3. Overheat alarm(O.H.A)LED	
10-4. Dimensions	
10-5. Applicable Motors	
10-6. Torque Characteristics	
10-7. Conforming to Europe standards	43

The main parts which revised by this manual

## 1. Safety

#### 1-1. Safety Precautions

#### 

- (1) This product is not designed or manufactured for application for equipment requiring high level of reliability such as equipment related to nuclear energy, aeronautics-related equipment, automobiles, ships, medical appliances directly handling the human body and equipment that might seriously affect properties.
- (2) Do not use or keep the product in explosive or corrosive environments, in the presence of flammable gases, locations subjected to splashing water, fine particles, soot, steam, or exposed to radiation or direct sunshine. Doing so may cause injury or fire.
- (3) For the driver's power supply, use a DC power supply with reinforced insulation on its primary and secondary sides. Failure to do so may cause electric shock.
- (4) This product is designed for use within machinery, so it should be installed within an enclosure. Failure to do so may cause injury.
- (5) Do not transport, move, install the product, perform connections or inspections when the power is on. Doing so may cause electric shock, injury or fire.
- (6) Only qualified personnel are allowed to transport, move, install the product, perform connections or inspections.
   Failure to do so may cause injury or fire.

#### 

- (7) Do not touch the driver during operation or immediately after stopping. Doing so may cause burn on the skin due to overheating of the driver.
- (8) Ensure to use this product according to the method specified in the Instructions Manual and within the specifications.
- (9) Depending on the operational conditions, the stepping motor may step out when it is on holding-state or driving-state. In particular, the load in transport may fall if the motor steps out on the vertical drive (such as the Z-axis). Start operation after test run for deliberate confirmation of operation.
- (10) Provide fail-safe measures so that the entire system may operate in a safe mode even in cases of the external power supply failure, disconnection of the signal line, or any failure on the driver.

#### 1-2. Safety Information for Handling

●0verall:

#### 

Do not touch the driver during operation or immediately after stopping. it may cause burn on the skin due to overheating of the driver.

●When setting up the MOTOR SELECT switch:

Erroneous setting may cause burn on the skin due to overheating of the motor. Ensure correct setting.

•When setting up the STEP ANGLE SELECT switch:

A CAUTION

Erroneous setting may cause breakage of the machine or injury due to unexpected rotation of the motor. Ensure correct setting.

●When setting up the HOLD CURRENT ADJUSTMENT trimmer:

### AUTION

A high setting value may cause burn on the skin due to overheating of the motor. Do not select a high value beyond the required. ●When setting up the DRIVE CURRENT SELECT switch:

A high setting value may cause burn on the skin due to overheating of the motor. Do not select a high value beyond the required.

#### ●When setting up the PULSE INPUT TYPE SELECT switch:

A CAUTION

Erroneous setting may cause breakage of the machine or injury due to unexpected rotation of the motor. Ensure correct setting.

●When installing:

#### \Lambda WARNING

Overheating may cause fire. Mount it on a noncombustible member. Keep it away from combustibles.

●When connecting the DC Input/Motor Output Connectors (J2, J3):

#### 

Erroneous connection may cause breakage of the motor or the driver. Correctly connect the DC Input/Motor output connector.

●When inputting power:

#### 

Breakage of the machine or injury is apprehended due to unexpected behavior of the motor. Maintain the state where emergency stop is enabled at any time. ●When inputting the motor excitation stop (M.F) signal:

Deterioration of the holding power with the motor may cause breakage of the machine or injury. Check safety before inputting.

●When the overheat alarm (O.H.A) LED comes on:

\Lambda WARNING

Overheating may cause fire. Stop operation when this LED comes on.

•When performing maintenance and checking:

### 🔬 WARNING

Injury or fire is apprehended due to unexpected behavior. Do not replace fuse. Do not disassemble, repair or modify.

## 2. Overview

#### 2-1. Characteristics

ADB-5F40 and ADB-5F40A<sup>\*1</sup> is a driver for a 5-phase stepping motor with DC +24V input. It can drive a 5-phase stepping motor with 0.75A/phase and 1.4A/phase. Step angles can be selected from six step angles ranging from 1 division to 40 division of the basic angle. HOLD CURRENT can be set up.


*1				
Model Name	Exterior Dimensions (mm)			
ADB-5F40	<sup>H</sup> 65 × <sup>W</sup> 57 × <sup>D</sup> 29			
ADB-5F40A	$^{H}65 \times ^{W}57 \times ^{D}32$			

● Applicable motors and setting for each motor are given in the table "10-5. Applicable Motors".

#### 2-2. Product Configuration

The product consists of the main frame and the accessories.


●ADB-5F40	One unit
●Housing for J1(51103-0800:Molex)	One unit (accessory)
●Housing for J2(51067-0200:Molex)	One unit (accessory)
●Housing for J3(51067-0500:Molex)	One unit (accessory)
• Contact for J1 ( $50351-8100$ : Molex)	10 contacts (accessories, 2 for spares)
●Contact for J2,J3 (50217-9101:Molex)	9 contacts (accessories,2 for spares)

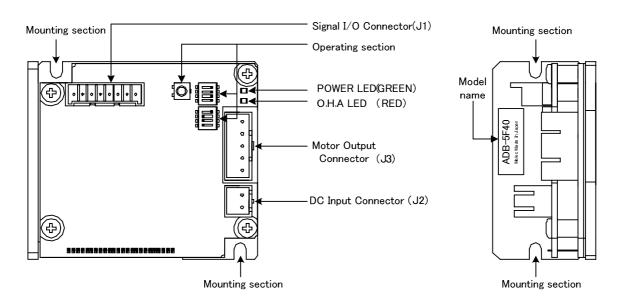


#### 2-3. Appearance

# 3. Name and Function of Each Section

3-1. Signal I/O Connector (J 1)

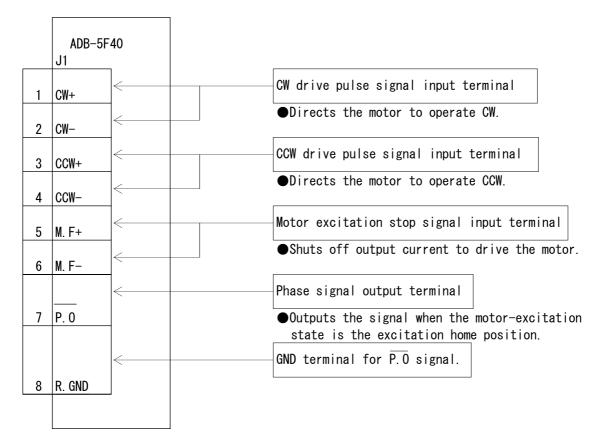

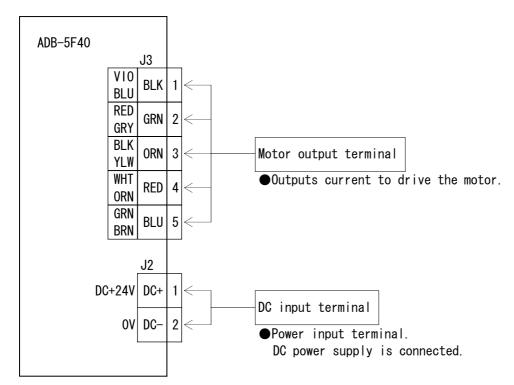

#### 3-2. DC Input/Motor Output Connector (J 2, J 3)


#### 3-3. POWER LED

POWER LED(GREEN) comes on upon inputting power.

#### 3-4. O.H.A LED

0. H. A LED (RED) comes on when internal temperature of the driver has reached approx.  $70^{\circ}$ C or more.

#### 3-5. Operating Section

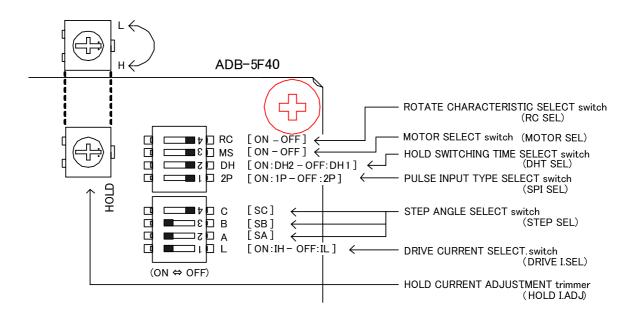

Name of Operating Section	Function	Factory Setting
4 ROTATE CHARACTRISTIC SELECT switch	Select a charactristic of motor rotation.	[0FF]
3 MOTOR SELECT switch	Use it with OFF.	[0FF]
2 HOLD SWITCHING TIME SELECT switch	DRIVE/HOLD CURRENT automatic switching time is selected.	[OFF (DH1)]
1 PULSE INPUT TYPE SELECT switch	Selects a pulse input type.	[OFF (2P)]

Name of Operating Section		Function	Factory Setting
4	STEP ANGLE SELECT switch		SC : [OFF]
3	STEP ANGLE SELECT switch	Selects a step angle.	SB: [ON]
2	STEP ANGLE SELECT switch		SA : [ON]
1	DRIVE CURRENT SELECT switch	Selects DRIVE CURRENT.	[ON(IH)]

Name of Operating Section	Function	Factory Setting
HOLD CURRENT ADJUSTMENT trimmer	Adjusts HOLD CURRENT.	[Approx. 40%]

## 4. Setting

#### 4-1. Setting MOTOR SELECT switch

#### 

Erroneous setting may cause burn on the skin due to overheating of the motor. Ensure correct setting.

Set this switch with power OFF. The switch is factory-set to [OFF].

(1) Use it with [OFF].

#### 4-2. Setting STEP ANGLE SELECT switch

#### 

Erroneous setting may cause breakage of the machine or injury due to unexpected rotation of motor. Ensure correct setting.

The step angle is set up with the STEP SEL switch. The step angle can be selected from six different types of step angles. The switches are factory-set to [20 divisions].

(1) Set the step angle required by the STEP SEL switch [SA, SB, SC].

 $\blacksquare$  Relationship between the STEP SEL switch and the step angle.

STEF	SEL s	witch	1/	Step angle(°)	
SC	SB	SA	Divisions	0.72° motor	
ON	ON	ON	1/1	0. 72	
ON	ON	0FF	1/2	0.36	
ON	0FF	ON	1/4	0. 18	
ON	0FF	0FF	1/10	0.072	
0FF	ON	ON	1/20	0.036	(Factory setting)
0FF	ON	0FF	1/40	0.018	

•Step angles are theoretical values.

4-3. Setting HOLD CURRENT ADJUSTMENT trimmer

A CAUTION

A high setting value may cause burn on the skin due to overheating of the motor. Do not select a high value beyond the required.


HOLD CURRENT is set up with the HOLD I.ADJ trimmer. The ratio of HOLD CURRENT to DRIVE CURRENT can be selected. The trimmer is factory-set to approx. 40%.

(1) Set the gauge of the trimmer to the required value.

•Relationship between the trimmer scales and HOLD CURRENT.

Ratio of HOLD CURRENT (%) =  $\frac{\text{HOLD CURRENT}}{\text{DRIVE CURRENT}} \times 100$ 

Ratio of HOLD CURRENT (typical)

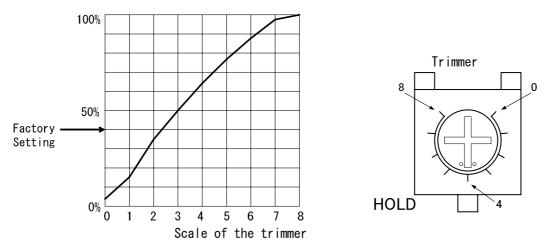

- HOLD CURRENT changes relative to DRIVE CURRENT setting. The ratio of HOLD CURRENT of 100% represents the same as the setting for DRIVE CURRENT.
- The greater the ratio of HOLD CURRENT grows, the more heat the motor generates when is on holding-state.
- When the trimmer is set minimum, HOLD CURRENT is approx. 20% or less of DRIVE CURRENT.

#### 4-4. Setting DRIVE CURRENT SELECT switch

▲ CAUTION

A high setting value may cause burn on the skin due to overheating of the motor. Do not select a high value beyond the required.

DRIVE CURRENT is set up with the DRIVE I.SEL switch. The switch is factory-set to [IH].

 Set the DRIVE I.SEL switch [IH/IL] to the setting specified in the table "10-5. Applicable Motors."

#### 4-5. Setting PULSE INPUT TYPE SELECT switch

## 

Erroneous setting may cause breakage of the machine or injury due to unexpected rotation of motor. Ensure correct setting.

Pulse input method is set up with the SPI SEL switch. Set this switch with power OFF. The switch is factory-set to 2-pulse input method[2P].

- (1) Turn power [OFF].
- (2) Set the SPI SEL [2P/1P] switch.

SPI SEL	Input type
ON	1PULSE (1P)
OFF	2PULSE (2P)

- When the motor is operated with two pulse signal inputs of CW and CCW, set the SPI SEL switch to [OFF(2P)].
- When the motor is operated with the pulse signal and direction signal input, set the SPI SEL switch to [ON(1P)].
- In the case that 1-pulse input method is selected, the CCW terminal becomes direction signal input designating the direction of the motor rotation. Drive pulse set to the CW terminal (CW+, CW-).

 $\begin{array}{cccc} \mbox{CCW terminal(CCW+, CCW-)} \\ \mbox{direction set} \end{array} \rightarrow \mbox{Photo-coupler OFF}: \mbox{CCW direction} \\ \mbox{> Photo-coupler ON}: \mbox{CW direction} \end{array}$ 

● The input timing is same with 2-pulse input method and 1-pulse input method . As for input timing, refer to "10-2. (2)Drive pulse input (CW, CCW)"

#### 4-6. Setting HOLD SWITCHING TIME SELECT switch

DRIVE/HOLD CURRENT automatic switching time is set up with the DHT SEL switch. The switch is factory-set to [DH1].

(1) Set the DHT SEL [DH1/DH2] switch.

DHT SEL	Hold Switching Time
ON	DH2(15ms)
0FF	DH1 (150ms)

4-7. Setting ROTATE CHARACTRISTIC SELECT switch

The switch is factory-set to [OFF].

- By setting the switch to [ON] the vibration of the motor in a acceleration/deceleration drive may reduce.
- Select it after evaluated characteristic with an actual device.

## 5. Installation

#### 5-1. Conditions for Installation


## 

Overheating may cause fire. Mount it on a noncombustible member. Keep it away from combustibles.

(1) Designed for incorporating into equipment used indoors, this product requires to be installed in the following environment:

●Indoors (where it is not exposed to direct sun).

- •Where ambient temperature and humidity are controlled within the range set out in the specifications.
- •Where there is no explosive, corrosive or inflammable gas.
- •Where it can be protected from dust, salt or iron powder.
- •Where the product main frame is not exposed to direct vibration or shock.
- •Where it is not exposed to splashes of water, oil or chemicals.
- (2) Install the driver at least 15mm away from other equipment.

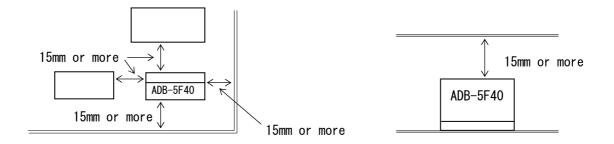

- (3) Considering heat release, control the ambient temperature around the driver within the specified value.
  - Take measures against accumulation of heat such as allowing generous space around the driver or installing a fan so that heat release is taken care of.
  - Install the driver securely in contact with metal or other substance with adequate heat conductivity.
- (4) In the case that the overheat alarm(O. H. A) LED comes on, perform the cooling measure of the mounting plate is enlarged or compulsion air cooling etc. Use the driver on the condition that the overheat alarm(O. H. A) LED goes out.
- (5) Do not allow standing or placing anything heavy on the product.


#### 5-2. Mounting Method

The round holes on the main body are used.

The following items are required:


●M-3 screw (8mm or more in length):	2
●M-3 spring washer:	2
●M-3 flat washer:	2

(1) Fix the product at the two round holes on the main body.

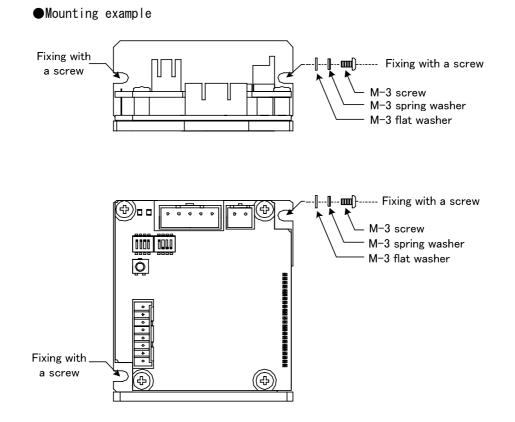

## 6. Connection


## 6-1. Overview of Connection Configuration

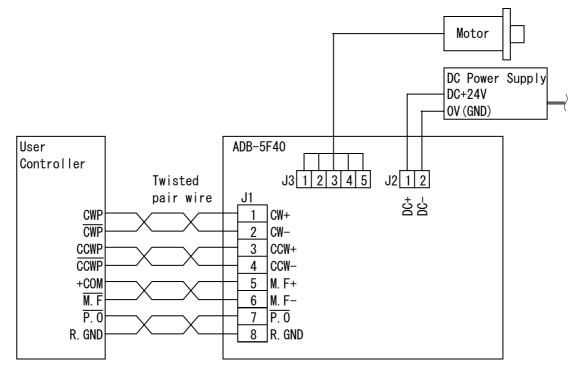

•Connect only one motor to one driver.

- ullet Do not power ON/OFF by the relay etc. in the output side of the DC power supply.
- ●Use twisted pair wire for the CW/CCW input signal line.
- •Provide shielding for the signal line where considerable noise is generated.
- •Use the wire material of the characteristic that is difficult to burn.
- •Provide shielding for the motor line if it generates significant noise.
- •For the driver's power supply, use a DC power supply with reinforced insulation on its primary and secondary sides.

The metallic enclosure and shielded wires work to shield noise.

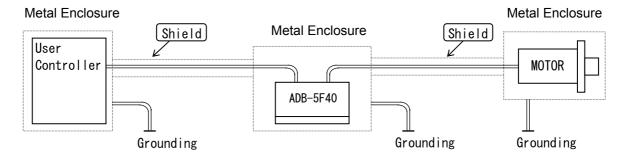

<sup>[</sup>Example configuration]

6-2. Connecting Signal I/O Connector (J 1)


The following items are required:


●Housing for J1 (51103-0800:Molex)	One unit (accessory)
●Contact for J1 (50351-8100:Molex)	8 contacts (accessories)
●Manually operated crimping tool	One unit
for AWG28-22(57295-5000:Molex)	

- (1) Crimp the contact to the cable used for wiring.
- (2) Insert the contact into the housing. Make sure that the housing No. and the connector No. on the main frame are matched before inserting the contacts.
- (3) Connect the housings to the connectors on the main frame.
  - •The contacts for J1 are 8 pieces.
  - •When inserting, keep pushing J1 housing into the connectors until it is locked. Also, check if the contacts are not displaced from the housing.
  - In wiring, isolate the J1 signal lines from equipment that may be a source of noise, the power line and the motor line.

(Surface on which the contacts are inserted)

 Housing for J1



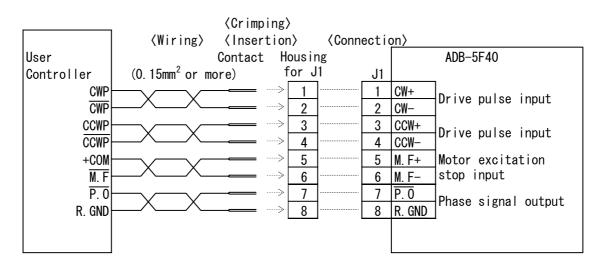

6-3. Connecting DC Input/Motor Output Connector (J 2, J 3)

Erroneous connection may cause breakage of the motor or the driver. Correctly connect the DC Input/Motor output connector.

The following items are required:


●Housing for J2(51067-0200:Molex)	One unit	(accessory)
●Housing for J3(51067-0500:Molex)	One unit	(accessory)
●Contact for J2,J3 (50217-9101:Molex)	7 contacts	(accessories)
Manually operated crimping tool	One unit	
for AWG24-18(57189-5000:Molex)		

- (1) Crimp the contact to the cable used for wiring.
- (2) Insert the contact into the housing. Make sure that the housing No. and the connector No. on the main frame are matched before inserting the contacts.
- (3) Connect the housings to the connectors on the main frame.
  - The contacts for J2(for DC input) are 2 pieces, and for J3(motor output) are 5 pieces.
  - When inserting, keep pushing J2, J3 housings into the connectors until it is locked. Also, check if the contacts are not displaced from the housing.


(Surface on which the contacts are inserted)

Housing for J2

 
Housing for J3



[DC input Connector]

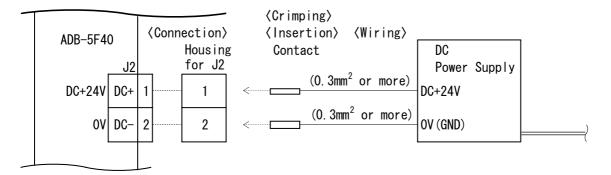

●Do not power ON/OFF by the relay etc. in the output side of the DC power supply.

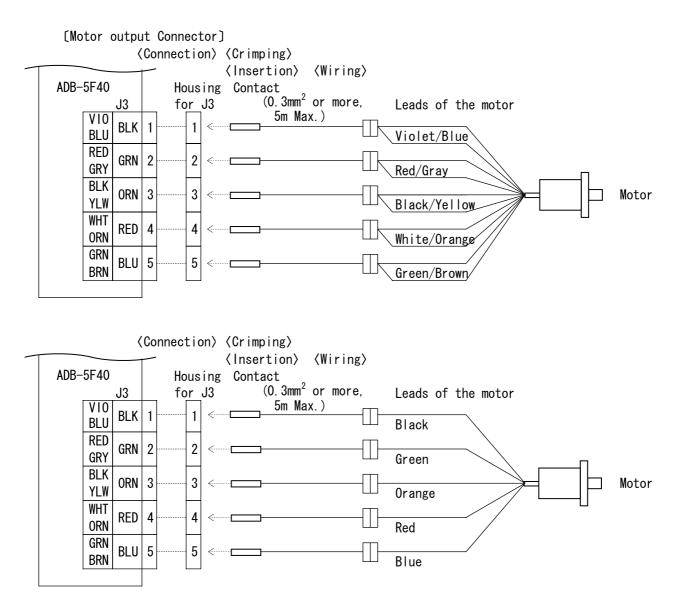

●Color indications for the motor crimping J3 represent colors of the leads of the motor.

ullet Use a cable of 5m or less for the motor cable .

#### 6-4. Inputting Power

Breakage of the machine or injury is apprehended due to unexpected behavior of the motor. Maintain the state where emergency stop is enabled at any time.

(1) Input the DC power supply (DC+24V) in the cable that connected to No.1 and No. 2 terminals of J2.

# 7. Confirmation of Setting and Connection

#### 7-1. Check Points

This product requires different switch setting and motor wiring depending on the motor used.  $% \left( {{{\left[ {{{\rm{s}}} \right]}}_{{\rm{s}}}}} \right)$ 

Check if the switch setting and the motor wiring are correctly performed.

Check Points		Check	Remarks
Setting of MOTOR SELECT switch	MOTOR SEL (OFF)		
Setting of PULSE INPUT TYPE SELECT switch	SPI SEL (1P/2P)		
Setting of HOLD SWITCHING TIME SELECT switch	DHT SEL (DH1/DH2)		
Setting of ROTATE CHARACTERISTIC SELECT switch	RC SEL (ON/OFF)		
Setting of STEP ANGLE SELECT switch	STEP SEL (SA, SB, SC)		
Setting of DRIVE CURRENT SELECT switch	DRIVE I. SEL (IH/IL)		
Setting of HOLD CURRENT ADJUSTMENT trimmer	Trimmer Scale		
Connection of J1			
Connection of J2	DC+, DC-		
Connection of J3	MOTOR		

## 8. Maintenance and Check-up

#### 8-1. Maintenance and Check-up

#### 

Injury or fire is apprehended due to unexpected behavior. Do not replace fuse. Do not disassemble, repair or modify.

- (1) As for maintenance inspections the engineer of the specialty shall do it.
- (2) We recommend that the following check-ups should be performed periodically:
   Checking for any loosened contact on the connectors.
   Checking for any flaw and crack on the cabling.
- (3) In case of failure, return the driver to us and have it repaired.

## 8-2. Troubleshooting

Trouble	Check Item	Assumed Cause
1. POWER LED does not come on.	<ul> <li>Connection of power supply.</li> <li>Value of power voltage.</li> </ul>	<ul> <li>Wiring error with power supply.</li> <li>Power voltage failure.</li> <li>Driver failure.</li> </ul>
2. The motor is not excited. (It can be easily rotated by hand.)	<ul> <li>Connection of the motor to the driver.</li> <li>ON/OFF status of the M.F signal.</li> <li>Value of the HOLD CURRENT ADJUSTMENT trimmer.</li> </ul>	<ul> <li>Wiring error with the motor and the driver.</li> <li>The M.F signal is input.</li> <li>HOLD CURRENT is set to zero.</li> <li>Driver failure.</li> </ul>
3. The motor does not rotate. The motor behaves abnormally. The motor steps out.	<ul> <li>The same check items as those under item 2 above.</li> <li>Setting of the MOTOR SELECT switch.</li> <li>Setting of the PULSE INPUT TYPE SELECT switch.</li> <li>Connection of the pulse signal.</li> <li>Voltage and wave form of the pulse signal.</li> <li>Setting of the DRIVE CURRENT SELECT switch.</li> <li>Setting of the STEP ANGLE SELECT switch.</li> </ul>	<ul> <li>Wrong setting for the motor selection.</li> <li>Wrong setting for the PULSE INPUT TYPE selection.</li> <li>Wiring error with the pulse signal line.</li> <li>Pulse signal of wrong specifications.</li> <li>Wrong Setting for DRIVE CURRENT selection.</li> <li>Wrong setting for the step angle.</li> <li>Driver failure.</li> <li>Motor failure.</li> </ul>
4. The motor steps out during acceleration.	<ul> <li>Starting pulse speed.</li> <li>Acceleration time.</li> </ul>	<ul> <li>Starting pulse signal speed is too high.</li> <li>Acceleration time is too short.</li> </ul>
5. The motor generates excessive heat.	<ul> <li>Setting of the MOTOR SELECT switch.</li> <li>Setting of the DRIVE CURRENT SELECT switch.</li> <li>Value of the HOLD CURRENT ADJUSTMENT trimmer.</li> </ul>	<ul> <li>Wrong setting for the motor selection.</li> <li>Wrong setting for DRIVE CURRENT selection.</li> <li>The setting for HOLD CURRENT is too high.</li> </ul>

Short-circuiting of the motor output connector may cause the driver to fail.

•The motor output connector and the power line.

laces The motor output connector and the motor output connector.

When the failure phenomenon cannot be remedied, contact our office.

# 9. Storing and Disposal

#### 9-1. Storing

(1) Keep the product in the following environment:

Indoors (where it is not exposed to direct sun).
Where ambient temperature and humidity are controlled within the range set out in the specifications.
Where there is no explosive, corrosive or inflammable gas.
Where it can be protected from dust, salt or iron powder.
Where the product main frame is not exposed to direct vibration or shock.
Where it is not exposed to splashes of water, oil or chemicals.

(2) Do not allow standing or placing anything heavy on the product.

#### 9-2. Disposal

(1) Dispose of the product as industrial waste.

# 1 O. Specifications

## 1 O - 1. General Specifications

Supply Power	$\begin{array}{llllllllllllllllllllllllllllllllllll$		
Motor output current	<ul> <li>DRIVE CURRENT IL:0.75A/phase(typical) IH:1.35A/phase(typical)</li> <li>HOLD CURRENT Approx. 40% of DRIVE CURRENT (factory-set)</li> </ul>		
Input Signal	●Drive pulse input (CW, CCW) Photo-coupler input ●Motor excitation stop input (M.F) Photo-coupler input		
Output Signal	●Phase signal output (P.0)		
Functions of Operating Sections	•MOTOR selection(MOTOR SEL)•Step angle selection(STEP SEL)•HOLD CURRENT adjustment(HOLD I. ADJ)•DRIVE CURRENT selection(DRIVE I. SEL)•PULSE INPUT TYPE selection(SPI SEL)•HOLD switching time selection(DHT SEL)•ROTATE CHARACTERISTIC selection(RC SEL)		
Overheat alarm	●Overheat alarm LED (O.H.A LED)		
Operating Ambient Temperature	0°C ∼ +40°C (No freezing allowed.)		
Operating Ambient Humidity	80%RH or less (No condensation allowed.)		
Storing Temperature	-10°C ~ +55°C (No freezing allowed.)		
Storing Humidity	80%RH or less (No condensation allowed.)		
Atmosphere	Indoor (Exposure to direct sun is not allowed.) Without any explosive, corrosive or inflammable gas, oil mist, or dust.		
Withstanding Vibration	No abnormality should be found after a vibration test at 10~55Hz, 0.15mm P-P		
Insulation resistance	DC connector - signal connector - Frame (Each other) DC500V 100MΩ or more		
Exterior Dimensions			
Weight	0.10 kg		


\*1 Input voltage range is DC+24V $\pm$ 10%.


\*2 Use a power supply that provides sufficient input current.

R1


## 10-2. I/O Signal

#### (1) Example Circuit Connection

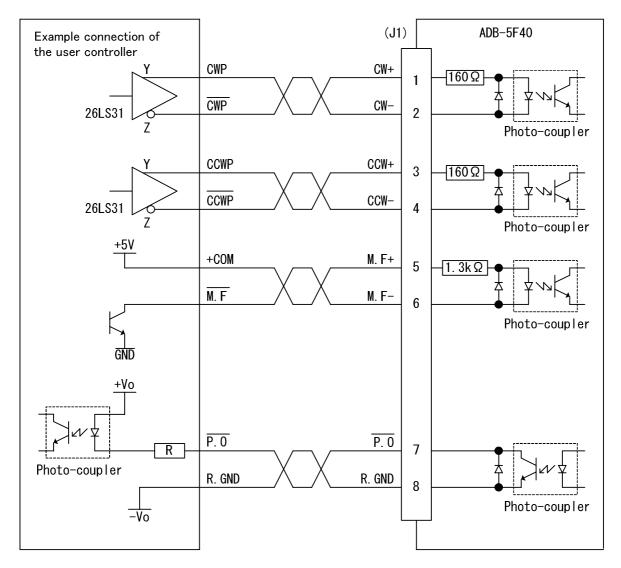


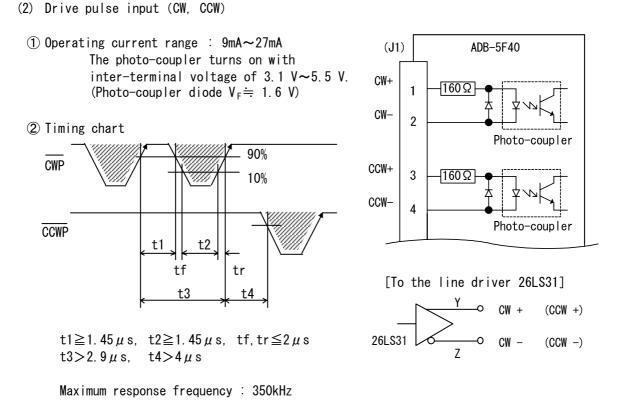


- The shaded area ( ) indicates light emission from the photo-coupler, and the motor is driven at the rising edge ( ).
  "t4" greatly varies according to the inertial moment including that of the motor.
- 3 Automatic switching for DRIVE/HOLD

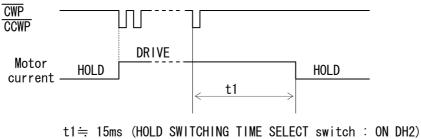


- t1=150ms (HOLD SWITCHING TIME SELECT switch : OFF DH1)
- Inputting drive pulse causes the current output to the motor to change from HOLD CURRENT to DRIVE CURRENT, which returns to HOLD CURRENT in about "t1". DRIVE CURRENT continues if pulse is input on driving-state.

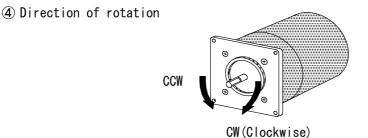


(3) Motor excitation stop input (M.F)

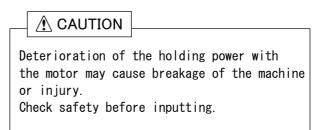


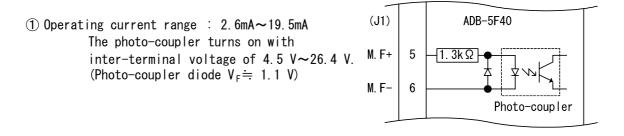

- Motor output current is shut off with the photo-coupler ON. At this time, motor torque changes to detent torque.
- When this signal is input, motor torque may be lost, resulting in failure to retain the load transported.
   In particular, this risk is high with the vertical drive (such as the Z-axis).

② Timing chart

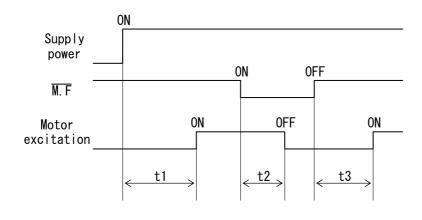

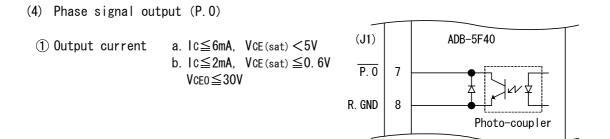

● In case of the excitation home position, the signal is output. (photo-coupler ON)

#### 2 Timing chart

- P.0 output timing (for 1/1 STEP)  $\overrightarrow{CWP}$   $\overrightarrow{CWP}$   $\overrightarrow{P.0}$   $\overrightarrow{For a motor with the basic angle of 0.72°}$ 
  - P.O output time

1/1 STEP:	once	in	10	pulses
1/2 STEP:	once	in	20	pulses
1/4 STEP:	once	in	40	pulses
1/10 STEP:	once	in	100	pulses
1/20 STEP:	once	in	200	pulses
1/40 STEP:	once	in	400	pulses

#### 1 O - 3. Overheat alarm LED (O.H.A)


Overheating may cause fire. Stop operation when this LED comes on.


- In case of internal temperature of the driver reaches approx. 70°C or more, 0. H. A LED comes on. At this time the motor output current is not blocked.
- When this LED comes on, stop operation and check if there is any abnormality occurring with the motor and the driver.
- Provide mechanical cooling, for example, if this LED comes on while no abnormality is detected.
- Continuous operation is possible unless this LED comes on.

R1

1 O - 4. Dimensions

(Unit:mm)

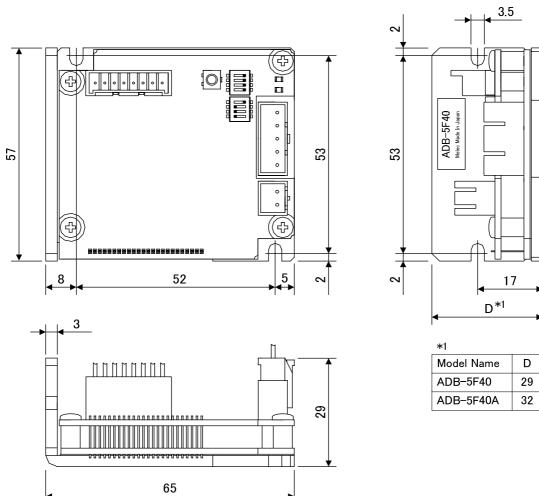

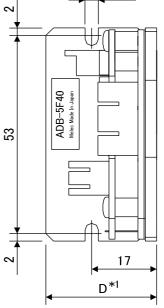

-35-	

## 1 O - 5. Applicable Motors

ORIENTAL MOTOR Co., Ltd.		Basic Angle (°)	Current (A/phase )	Setting DRIVE I.SEL switch No.	Setting MOTOR SEL switch No.	Torque Data Fig. No.
□42mm	PK543-A (B) PK544-A (B) PK545-A (B)	0. 72 0. 72 0. 72	0. 75 0. 75 0. 75	OFF (IL) OFF (IL) OFF (IL)	OFF OFF OFF	Fig.1 Fig.2 Fig.3
□60mm	PK564-A (B) PK564H-A (B) PK566-A (B) PK566H-A (B) PK569-A (B)	0. 72 0. 72 0. 72 0. 72 0. 72 0. 72	0. 75 1. 4 0. 75 1. 4 1. 4	OFF (IL) ON (IH) OFF (IL) ON (IH) ON (IH)	OFF OFF OFF OFF OFF	Fig.4 Fig.5 Fig.6 Fig.7 Fig.8
SANYO DENKI Co., LTD.		Basic Angle (°)	Current (A/phase )	Setting DRIVE I.SEL switch No.	Setting MOTOR SEL switch No.	Torque Data Fig. No.
□28mm	103F3505–7441 (7411) 103F3515–7441 (7411)	0. 72 0. 72	0. 75 0. 75	OFF (IL) OFF (IL)	OFF OFF	Fig.9 Fig.10
□42mm	103F5505-7241 (7211) 103F5505-8241 (8211) 103F5508-7241 (7211) 103F5508-8241 (8211) 103F5510-7241 (7211) 103F5510-8241 (8211)	0. 72 0. 72 0. 72 0. 72 0. 72 0. 72 0. 72	0. 75 1. 4 0. 75 1. 4 0. 75 1. 4	OFF (IL) ON (IH) OFF (IL) ON (IH) OFF (IL) ON (IH)	OFF OFF OFF OFF OFF	Fig. 11 Fig. 12 Fig. 13 Fig. 14 Fig. 15 Fig. 16
⊡60mm	103F7851-8241 (8211) 103F7852-8241 (8211) 103F7853-8241 (8211)	0. 72 0. 72 0. 72	1.4 1.4 1.4	ON (1H) ON (1H) ON (1H)	OFF OFF OFF	Fig.17 Fig.18 Fig.19
Factory Setting				ON (IH)	0FF	_

●ADB-5F40 can drive a 5-phase stepping motor with 0.75A/phase and 1.4A/phase.

( ) : Both axes


#### 10-6. Torque Characteristics


(1) Representations in the torque characteristics table are made in terms of the motor rotation  $(s^{-1})$  vs. torque  $(N \cdot m)$ . Motor rotation  $(s^{-1})$  and drive pulse frequency (Hz) are converted as follows:


Motor rotation(s<sup>-1</sup>) ×  $\frac{360^{\circ}}{\text{Step angle}}$  = Drive pulse input frequency(Hz)


ullet Maximum value of the rotate speed is 100s<sup>-1</sup> at 0.72° motor.


- (2) The Maximum Starting Pulse Rate is represented as "fs" by the value at zero inertial load.
- (3) Upon operation, provide adequate allowance for torque.
- (4) The stepping motor may attain high temperature, depending on the operational conditions.
   Use the stepping motor according to the Instructions Manual produced by motormakers.

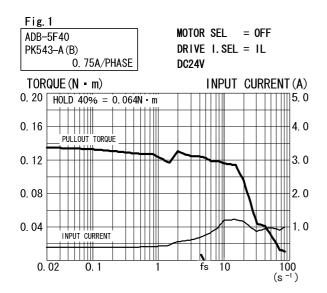


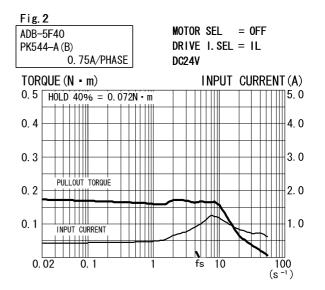


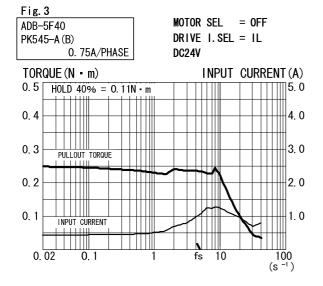


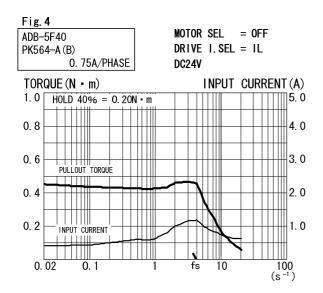


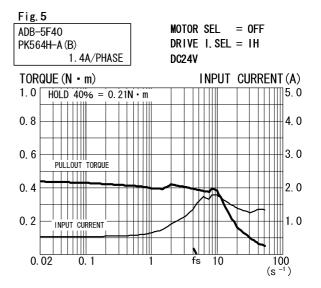


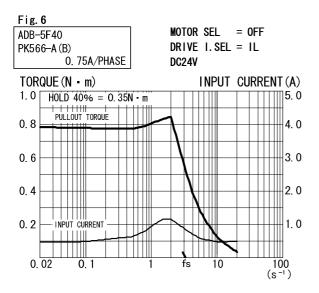


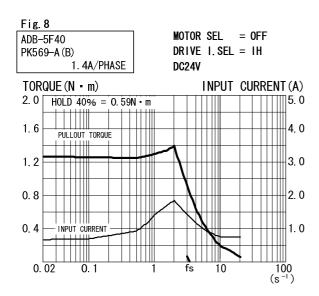


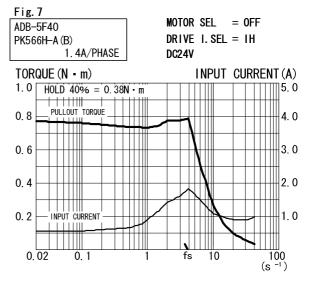


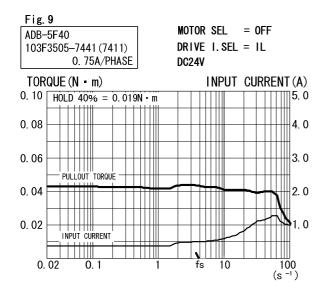


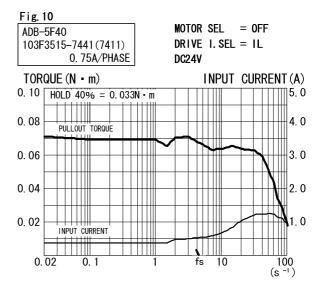

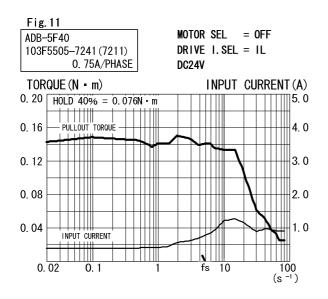

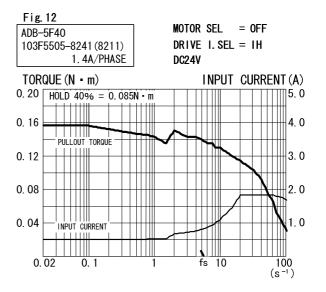

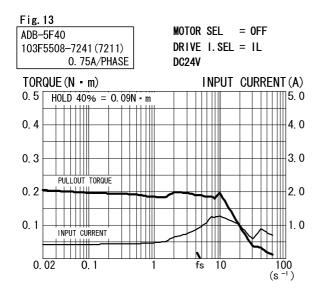

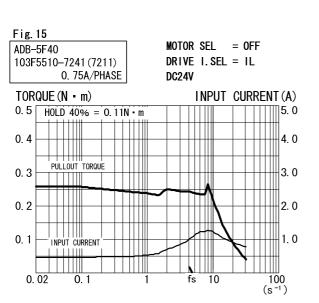





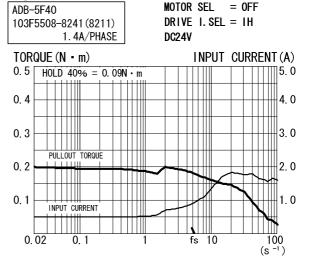


Fig. 14

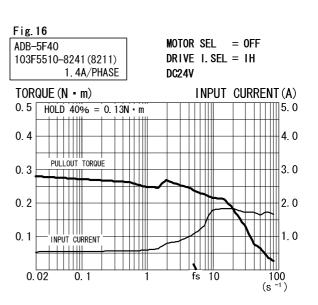

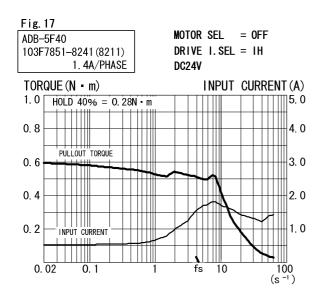

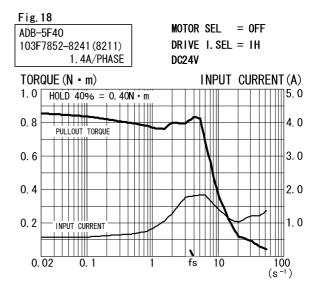

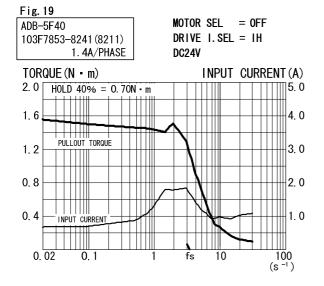

R2

#### 1 O - 7. Conforming to Europe standards

(1) Low voltage directive

This product is not subject to the EC's Low Voltage Directive by the following.


- This product should be installed within an enclosure.
- For the driver's power supply, use a DC power supply with reinforced insulation on its primary and secondary sides.
- (2) EMC directive

This product declares the CE marking based on the EMC Directive by oneself.

- Applicable Standards EN61000-6-4 EN61000-6-2
- This product conducted EMC measurement with the system configuration for EMC.
   EMC characteristic may vary depending on the configuration of the equipment that contains the driver or stepping motor. Be sure to conduct EMC measurement with the product assembled in your equipment.

#### Configuration

The metallic enclosure and shielded wires and ferrite core work to shield noise.

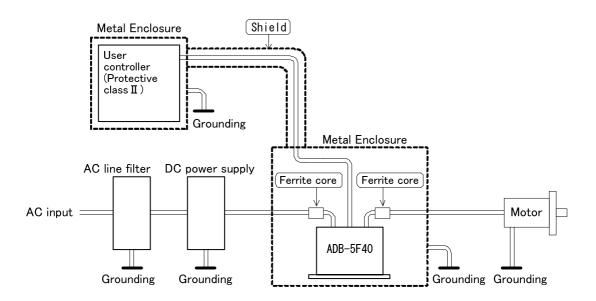

Parts	Content
P10, P29, P35	[R1] Addition of [ADB-5F40A].
P43	[R2] Deletion of the directive number.

# The main parts which revised by this manual

#### Technical Service

TEL. (042)664-5382 FAX. (042)666-5664 E-mail s-support@melec-inc.com

#### Sales and Service

TEL. (042) 664-5384 FAX. (042) 666-2031 URL:http://www.melec-inc.com

Melec Inc. Control equipment marketing department 516-10,Higashiasakawa-cho,Hachioji-shi,Tokyo 193-0834,Japan

This Operating Manual is subject to change without prior notice for the purpose of product improvement.